


Item No. : **SPR-122L** Installation guide

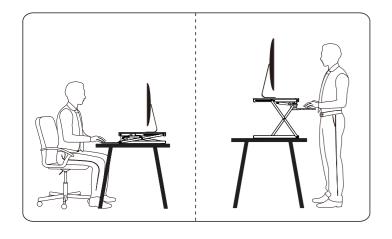

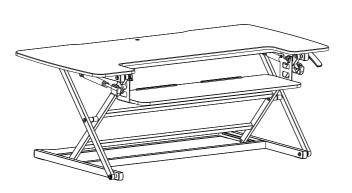

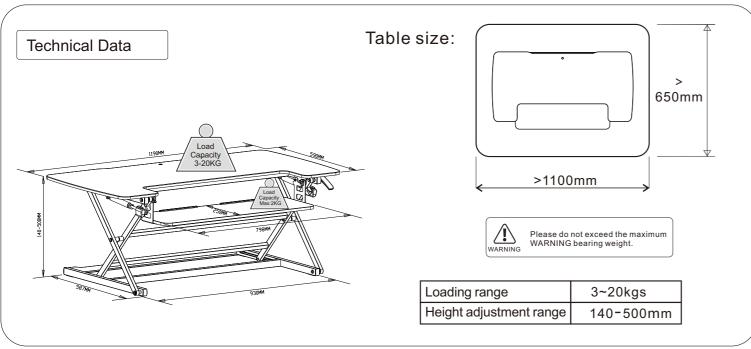





Parts List

No.	Part	No.	Part	No.	Accessory
A	x1	В	29 20 20 X 1	С	×4
No.	Accessory				
D	x1				






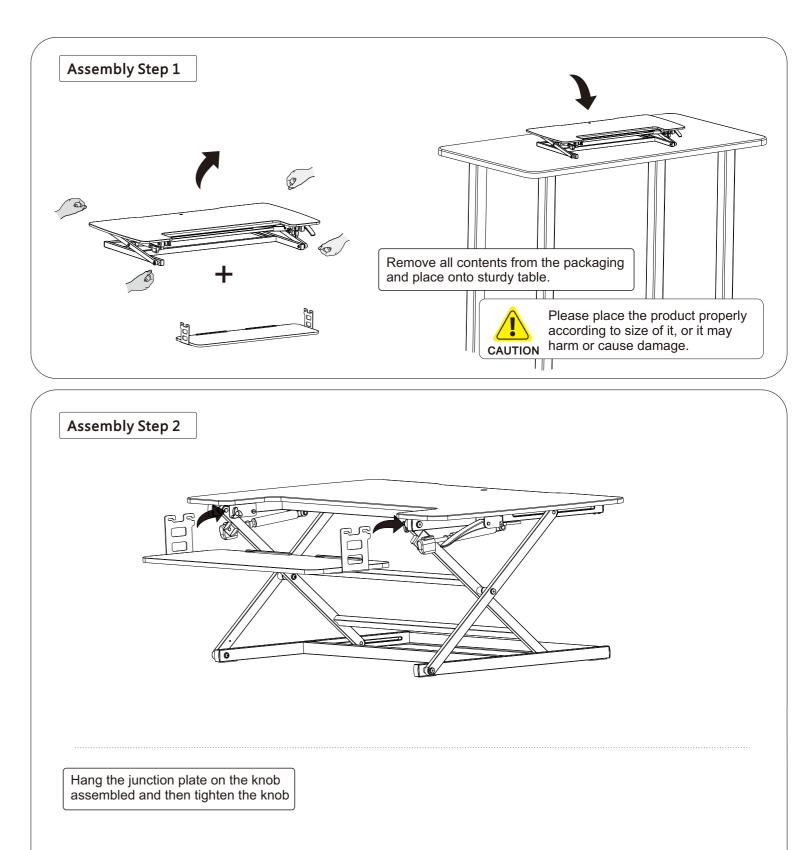

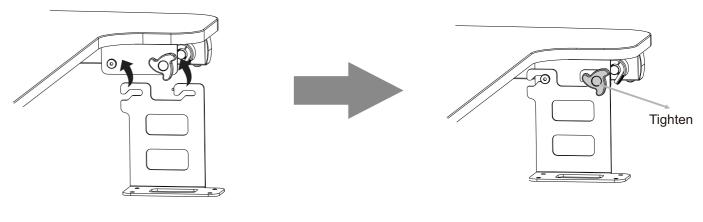

Assembly Step 3

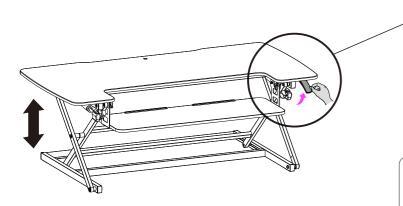


Based on the actual usage, press the handle grips simultaneously, and adjust the workstation to the proper height




Please do not put hands near the supporting bars, as they change during adjusting and may hurt you.

Assembly Step 4

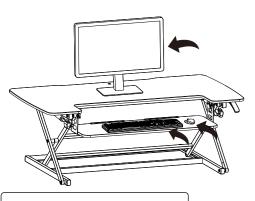

Please put the devices onto the top of the workstation.

CAUTION unexpected lost.

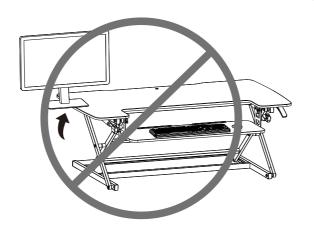



Please make sure all installed equipments are on the table, and not sticking out of the edge, or it may harm or cause damage.

Assembly Step 5 This surface is with glue. helping to fix the cable management on the table management on the table and bundle the cables tidy and clean. Please leave enough length of cable for height adjustment function, otherwise it may cause

△ WARNING


Hands Pinching



Do not place your hand near the strut. Strut's angle will change during the desktop lifts and it may hurt you.



Please do not put hands near the supporting bars, as they change during adjusting and may hurt you.

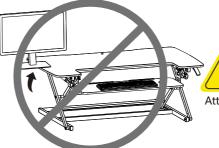



Please make sure all installed equipments are on the table, and not sticking out of the edge, or it may harm or cause damage.




Please leave enough length of cable for height adjustment function, otherwise it may cause unexpected lost.





Warning

Please first adjust it to the highest, then remove equipment to avoid harm or damage.

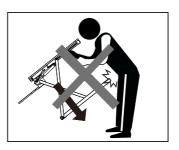



Warning

Please move it by two persons, or parts may collide and cause damage.

Made in ChRL for **DMTrade Mikołaj Tomaszewski** Wiśniowa 36, 64-000 Kościan, Poland

NIP: PL6981681757 email: sklep@dmtrade.pl phone #1: +48 661 082 052 phone #2: +48 726 082 052

www.ergoline.spacetronik.eu